
Characterization of GAE modes and their effect on electron thermal transport

K. Tritz, D. Stutman
Johns Hopkins University

N. N. Gorelenkov
Princeton Plasma Physics Laboratory


and the NSTX Team

NSTX 2010 Research Forum
Dec. 1st - 3rd, 2009, PPPL

Research Motivation:

- **Flat electron temperature profiles in NSTX core have no validated explanation**
- **Central temperature and density gradients too low to drive microturbulence**
- **Fast ion phase-space gradients can drive energetic particle modes which overlap and cause stochastic electron particle orbits**
- **Theoretical connection between GAEs and electron thermal transport demonstrated numerically**

XP921 used P_{NB} power steps to modify GAEs

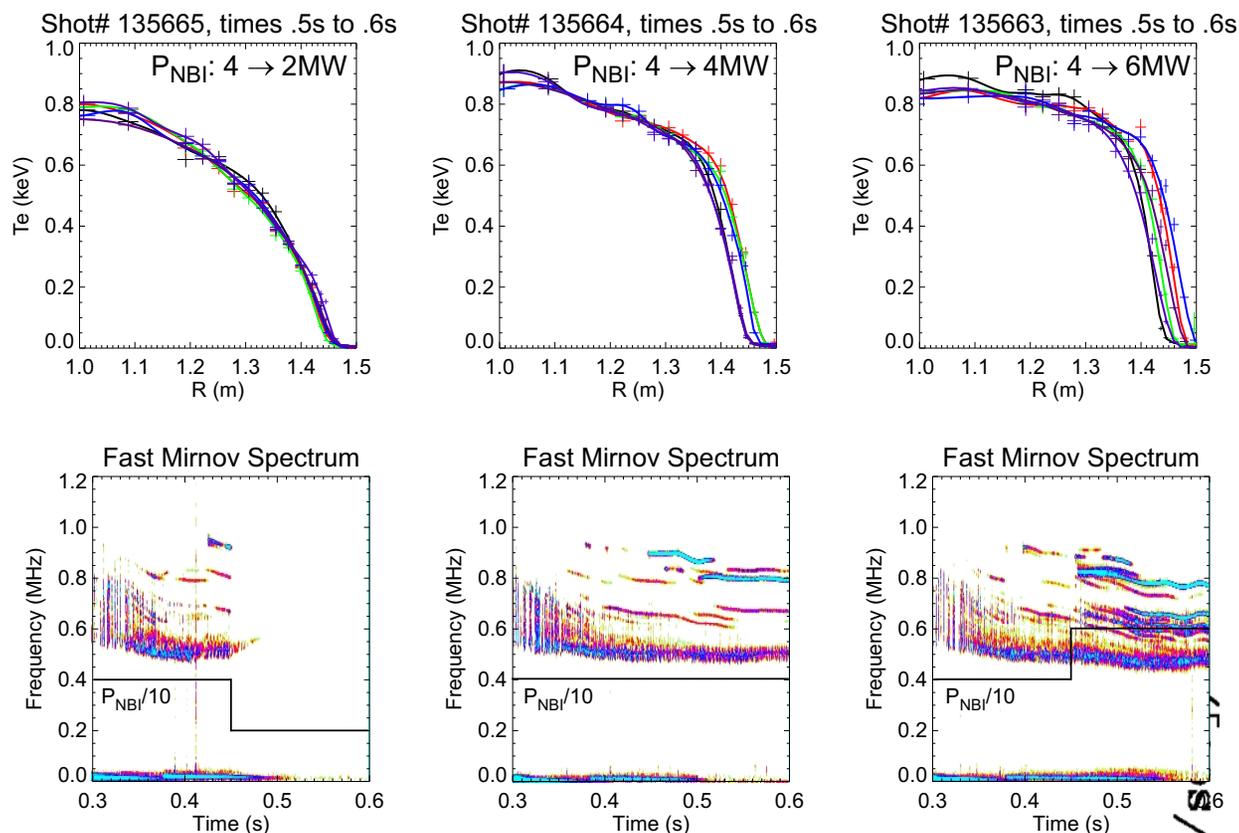


Central T_e remains ~ 0.8 keV

GAE amplitude increases with increasing P_{NB}

Equilibrium/TRANSP analysis underway



N. Gorelenkov

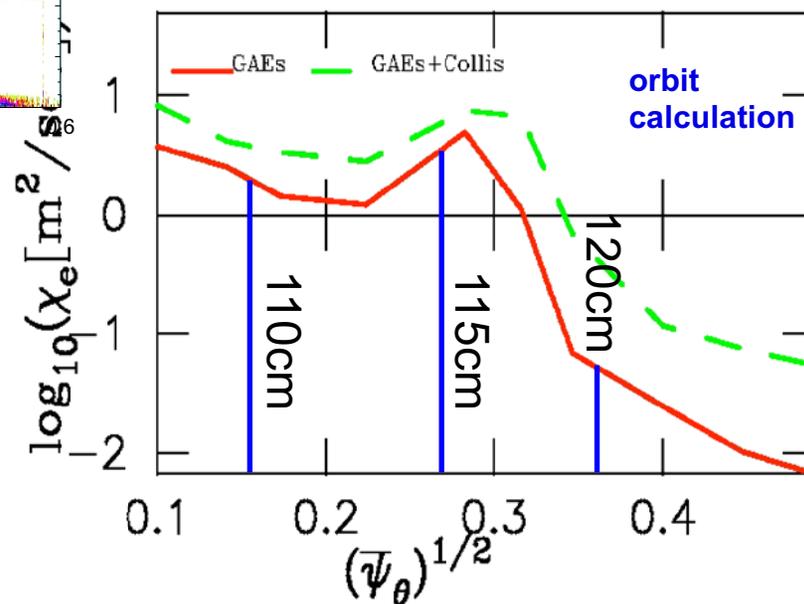



GAE modes peaked off-axis ~ 115 cm

High-k scanned radially in interferometric mode: 115cm & 120cm

High-k interferometric signals show increase in GAE-induced density fluctuations for P_{NBI} step-up

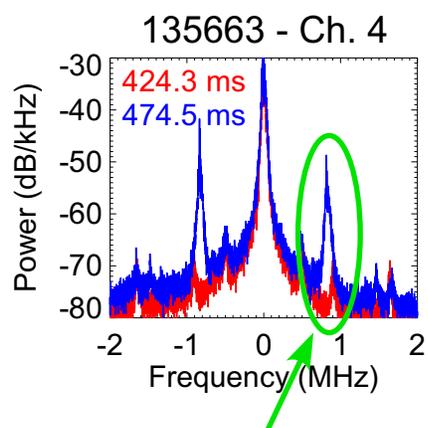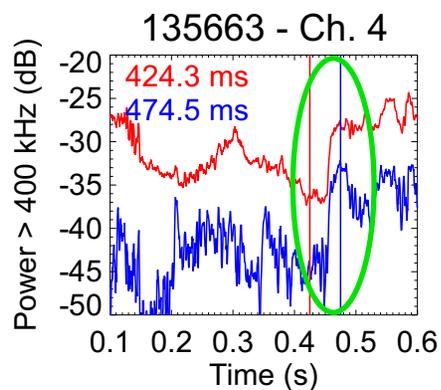

Density fluctuation power in 0.5-1MHz frequency band increases strongly at beam step

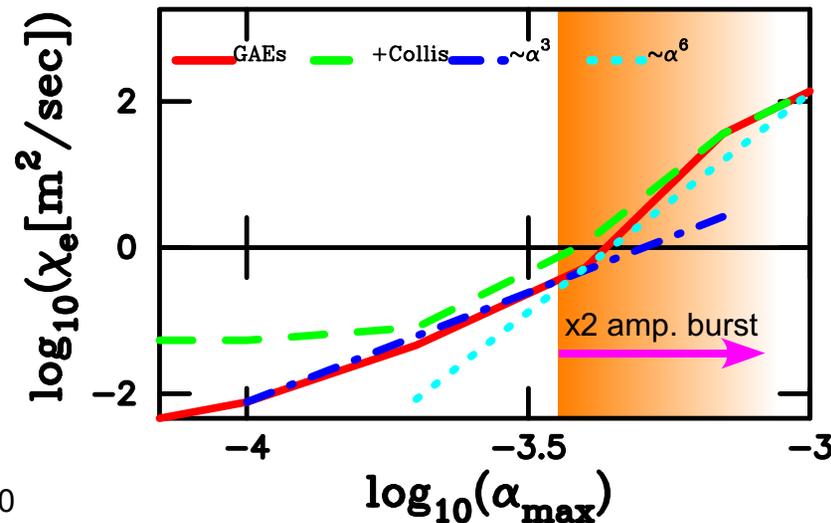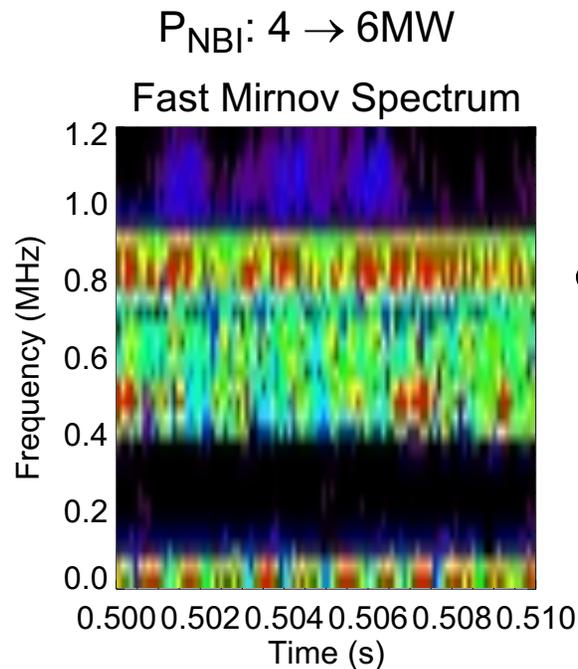

GAE bursts may have amplitude much larger than time-averaged $\delta n/n$

Strong non-linear dependence of transport on mode amplitude (χ_e vs α_{max}) suggests bursting modes may dominate electron thermal transport

Proposed XP: Use new/upgraded diagnostics to NSTX obtain simultaneous radial eigenfunction of *AE modes

Previous XP921: probed only 2 locations (115, 120cm) with high-k interferometric measurement

New/upgraded diagnostics for proposed XP:

BES (D. Smith) will cover 115 - 140cm up to 1MHz

High-f reflectometer (N. Crocker) can cover core and edge (depends on ne profile)

FiRETIP (K.C. Lee) provides line-integrated n_e up to 2MHz at 32, 57, 85, 118, 132, 150cm

Simultaneous measurements allow condensed run plan:

P_{NB} steps as before 4→2, 4→4, 4→6MW (2 ea. for 6 shots)

B field scan at constant q: B_T @ .45, .5, .55T (12 additional shots)

Shot total: 18 - 1 run day

